

IMPORTANT SAFEGUARDS READ AND FOLLOW ALL SAFETY INSTRUCTIONS.

When using electrical equipment, basic safety precautions should always be followed including the following:

• DISCONNECT AC POWER SUPPLY BEFORE SERVICING.

- Installation and servicing of this equipment should be performed by qualified service personnel only.
- Ensure that the electrical wiring conforms to the National Electrical Code NEC® and local regulations if applicable.
- Do not mount near gas or electric heaters.
- Do not use outdoors.
- Equipment should be mounted in locations and at heights where it will not be readily subjected to tampering by unauthorized personnel.
- The use of accessory equipment not recommended by the manufacturer may cause an unsafe condition.
- Any modification or use of non-original components will void the warranty and product liability.
- Do not use this equipment for other than intended use.
- Allow battery to charge for 24 hours before first use.

SAVE THESE INSTRUCTIONS!

INSTALLATION INSTRUCTIONS

ENCLOSURE MOUNTING

- 1. Remove 2 screws holding and lens and set aside.
- 2. Loosen screws to remove face plate & board assembly.
- 3. Route transformer leads through knockouts to junction box.
- 4. Connect AC to primary leads of transformer.

120V: USE BLACK & WHITE WIRES 277V: USE ORANGE & WHITE WIRES *Skip instruction 5 when installing AC Only units.*

5. Attach battery leads to battery terminals. Red lead to positive terminal, and black lead to negative terminal. FAILURE TO MAKE PROPER BATTERY CONNECTIONS WILL DAMAGE UNIT.

SINGLE FACE SIGNS (Fig. 1)

- 6. Ensure three position white female connector with red and white wires from PCB board is connected to white male connector from transformer secondary.
- 7. Mount enclosure to wall or ceiling. Optional canopy mounting is included.

DOUBLE FACE SIGNS (Fig. 2)

8. The secondary face is connected to the primary face by means of a white connector from ribbon cable, extended from primary board. **NOTE:** Remove lens labeled "Remove for Installation".


ARROW SELECTION


9. Insert screwdriver into slot and push down on handle to expose the desired arrow(s).







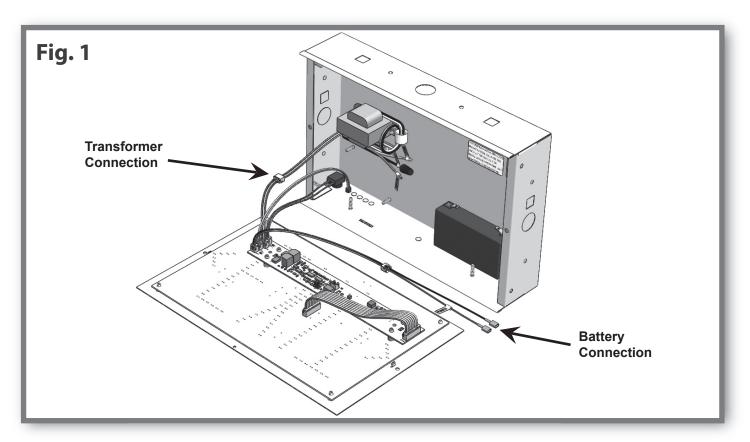

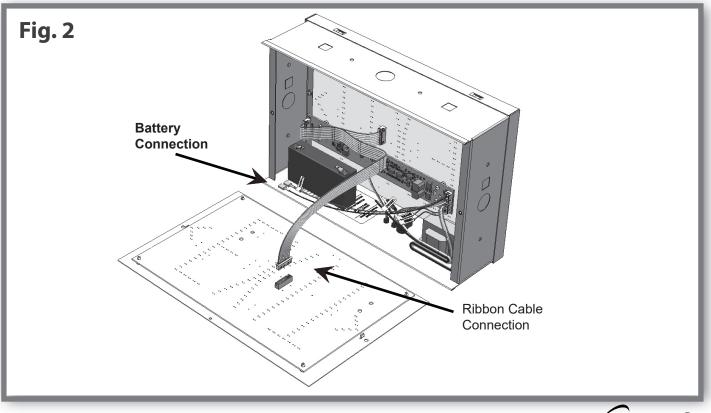

40070019 Rev 1 - 03/19